

SentriCore works on a learnt device principle. This means that all the transmitters are taught into the receivers. This is straight forward and detailed below.

# Programming in a transmitter (Control Unit)





1. Make sure the Control unit is powered on, and you have the transmitter you want to program into the system with you.

2. Hold the **MENU** for 3 seconds to enter the main menu

- 1. TEACH MODE
- 2. DEVICE LIST
- 3. SITE SURVEY
- 4. EXIT

3. Go to **TEACH MODE** and press ENTER button. Transmitter will flash to show it has been seen, and Control Unit will move to the next screen to name the transmitter.

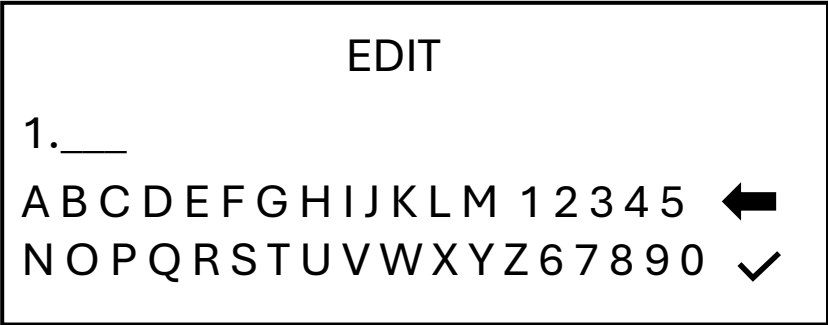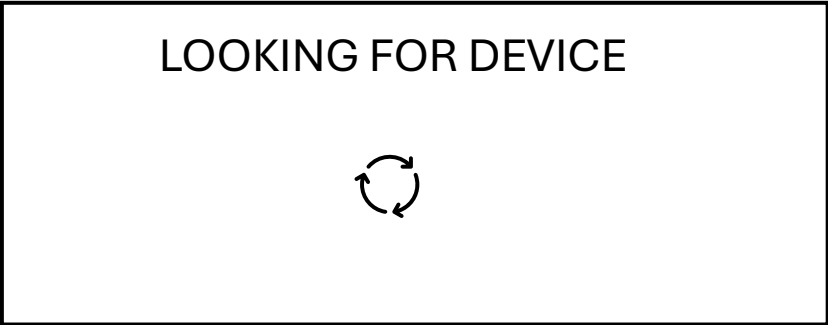

Use arrow keys to select letters/numbers, then press ENTER to confirm the transmitter name.

4. Press Enter to go back to the **MAIN MENU**.

# Programming in a transmitter (Wireless Siren)



1. Open the Siren via the 4 screws on the back plate to gain access to the PCB internally
2. Make sure the Wireless Siren is powered on, and you have the transmitter you want to program into the system with you
3. Hold the **MENU BUTTON** for 3 seconds to enter the main menu

1. **TEACH MODE**
2. **DEVICE LIST**
3. **EXIT**

3. Go to **TEACH MODE** and press ENTER button. Transmitter will flash to show it has been seen, and Wireless Siren will move to the next screen to name the transmitter.

LOOKING FOR DEVICE




EDIT

1.\_\_\_\_  
A B C D E F G H I J K L M 1 2 3 4 5 ←  
N O P Q R S T U V W X Y Z 6 7 8 9 0 ✓

“Device Name”

Transmitter  
Control Unit  
Auto Reset

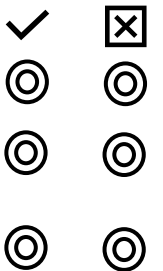

4. Press Enter (✓) to move the cancellation menu.
  - Select how this transmitter is cancelled:
    - Transmitter – Where a static call point is used (Panic Alarm) when you release the button this will cancel the siren
    - Control Unit – Siren will cancel when control unit is cancelled
    - Auto Reset – Siren will reset after 30 seconds
5. Press **BACK** button to go back to Main Menu

## Devices in the system

1. Make sure the Control unit / Wireless Siren are powered on, and you have the transmitter you want to program into the system with you.
2. Hold the **MENU** for 3 seconds to enter the main menu

- |  |
|--|
| <ol style="list-style-type: none"> <li>1. TEACH MODE</li> <li>2. DEVICE LIST</li> <li>3. SITE SURVEY</li> <li>4. EXIT</li> </ol> |
|--|

3. Scroll down to **DEVICE LIST** and press the **ENTER** button

DEVICE LIST		
1. POOL ALARM	D	E
2. GYM	D	E
3. STUDIO	D	E



EDIT	
POOL ALARM__	
ABCDEFGHIJKLM 12345	←
NOPQRSTUVWXYZ67890	✓

DELETE	
POOL ALARM	<input checked="" type="checkbox"/> ✓



4. Scroll to device **D = DELETE & E = EDIT**
  - **EDIT** – Can rename transmitter
  - **DELETE** – Removes the device from the system
5. Press Enter to go back to the **MAIN MENU**.

## Site Survey (Control Unit Only)

1. Make sure the Control unit is powered on.
2. Hold the **MENU** for 3 seconds to enter the main menu

1. **TEACH MODE**  
2. **DEVICE LIST**  
3. **SITE SURVEY**  
4. **EXIT**

3. Scroll down to **SITE SURVEY** and press the **ENTER** button
4. Activate Transmitter

**SITE SURVEY**  
**“DEVICE NAME”**  
**2**

5. Press back button to go back to main menu

<b>1</b>	<b>90% - 100%</b>
<b>2</b>	<b>70% - 89%</b>
<b>3</b>	<b>60% - 69%</b>
<b>4</b>	<b>50% - 59%</b>
<b>5</b>	<b>40% - 49%</b>

Guidance: If signal is below 50%, reposition the transmitter or control unit, remove nearby interference, or consider a booster.

## Alarm Alerts



### ALARM SCREEN

\*ALARM\*

“DEVICE NAME”

Screen will flash and audible alarm emitted

Press the cancel button to cancel alarm

## REPORT SCREEN

\*REPORT\*  
“DEVICE NAME”  
LOW BATTERY

Screen will flash slowly and audible alarm emitted  
Press the cancel button to cancel alarm

### REPORT

### SOLUTION

<b>Low Battery</b>	<b>Battery needs replacing</b>
<b>Signal Lost</b>	<b>Transmitter down or been removed from site</b>

Contact SentriCore is issues continue

- [FAQ & Trouble Shooting page](#)
- [info@SentriCore.co.uk](mailto:info@SentriCore.co.uk)
- 0208 138 5332